



## **Scheduled Maintenance Chart**

### **3,000 Miles(4,800 km)**

#### **100 Hrs Normal Use or 50 Hrs Severe Operation**

- Change Engine Oil and Replace Filter
- Check Items in Maintenance Group A

### **6,000 Miles(9,700 km)**

#### **200 Hrs Normal Use or 100 Hrs Severe Operation**

- Change engine oil and replace filter
- Clean or replace air filter
- Replace fuel filter element
- Check Items in Maintenance Groups A and B

### **9,000 Miles(14,500 km)**

#### **300 Hrs Normal Use or 150 Hrs Severe Operation**

- Change engine oil and replace filter
- Check Items in Maintenance Groups A and B

### **12,000 Miles (19,300km)**

#### **400 Hrs Normal Use or 250 Hrs Severe Operation**

- Change engine oil and replace filter
- Clean or replace air filter
- Replace fuel filter element
- Change geared hub oil
- Change axle oil
- Change engine coolant
- Change transmission and transfer case fluid
- Change transmission filter
- Check Items in Maintenance Groups A, B, and C

### **15,000 Miles(24,300 km)**

#### **400 Hrs Normal Use or 200 Hrs Severe Operation**

- Change engine oil and replace filter
- Check Items in Maintenance Groups A and B

**18,000 Miles(29,000 km)**

**600 Hrs Normal Use or 300 Hrs Severe Operation**

- Change engine oil and replace filter
- Clean or replace air filter
- Replace fuel filter element
- Check Items in Maintenance Groups A and B

**21,000 Miles(33,800 km)**

**700 Hrs Normal Use or 350 Hrs Severe Operation**

- Change engine oil and replace filter
- Check Items in Maintenance Groups A and B

**24,000 Miles (38,600km)**

**800 Hrs Normal Use or 400 Hrs Severe Operation**

- Change engine oil and replace filter
- Clean or replace air filter
- Replace fuel filter element
- Change geared hub oil
- Change axle oil

**24,000 Miles (38,600km)**

**800 Hrs Normal Use or 400 Hrs Severe Operation continued..**

- Change engine coolant
- Change transmission and transfer case fluid
- Change transmission filter
- Inspect brake fluid for moisture contamination
- Check Items in Maintenance Groups A, B, and C

**27,000 Miles (43, 400 km)**

**900 Hrs Normal Use or 450 severe Operation**

- Change engine oil and replace filter
- Check Items in Maintance Groups A

**30,000 Miles (48, 300 km)**

**1,000 Hrs Normal Use or 500 severe Operation**

- Change engine oil and replace filter
- Clean or replace air filter
- Replace fuel filter elemnet
- Check items in Maintenance Groups A and B

\*Maintenance After Severe Operation

Severe operation includes extensive off-road